

Robertson (Zip-Tour Harness) CRC-300 Series

CRC301 Small (red) CRC300 (blue) CRC302 Large (gray)

For your own safety, please read and understand all information included with this product. Retain the instructions for future use and reference as needed. Provide this sheet to anyone using or supervising the use of this harness.

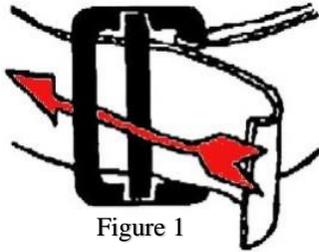


Figure 1

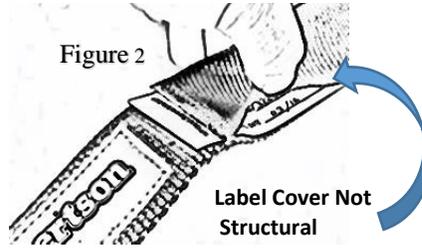


Figure 2

Label Cover Not Structural



Figure 3

Installation Instructions

- Loosen all buckles and expand the webbing. You will not need to totally unfasten the ends.
- Step down through the waist belt and leg loops. Pull the harness up and slip on the shoulder straps.
- Tighten waist belt until snug. Tighten leg straps until they are ½" larger than your thigh when tensed. (You should be able to slide your fingers between the leg strap and your thigh.)
- The quick-adjust buckle is laced with the web coming in the back of the buckle, around the slider, then out under the buckle again. Figure 1
- At least 4 inches of web tailing must extend from the buckle once secured on waist, legs and chest adjust pieces.
- The shoulder straps can then be tightened to a snug fit.
- Adjust the chest strap height and snugness so that the shoulder straps will stay on the shoulders in a dynamic fall.
- To tie-in, simply clip into the colored belay loop provided in the front or rear of the harness. See figure 3 & 4.
- Never clip into the label cover on the front of the waist belt. figure 2.
- The rear colored loop is a structural loop for tying off at a work station or platform.



Figure 4

Do not attempt to tie-in anywhere other than the intended colored belay loop or rear tie off loop.

This product has been designed, tested, and manufactured in accordance with ASTM-F 1772 testing which meets PRCA/ANSI 1.0-1.3 and ANSI/ACCT 03-2016 standards in effect on the date of manufacture.

WARNING! Never adjust the web tailing in the buckle to its absolute extended length, keep a 4 inch minimum requirement. Understand Rock climbing, ice climbing, mountaineering and other related activities are extremely dangerous by their very nature. A mistake or accident may result in injury or death. It is the sole responsibility of the buyer and the user of all climbing equipment to get the proper instruction and to practice caution when climbing or otherwise using this equipment.

Frequently inspect every piece of climbing equipment for possible damage or signs of wear. Climbing equipment cannot be expected to last forever, and it is up to the individual user to determine when to retire a piece of equipment.

CLIMB SMART! Seek qualified instruction, and take responsibility for yourself. Inspect this product regularly and retire immediately if it shows signs of wear or damage. Do not attempt to use this product if you are not fully competent in its and care. Treat this product as though your life depends on it. Improper care or use of this product can result in serious or death